


## **NOTICE:**

Check valve included with unit is intended only to be used as shown below. If no filters are installed, the check valve should not be used. If water supply valve has a back flow preventer in it, an expansion tank allowing a minimum of 5 in<sup>3</sup> (2.8 oz) is needed on chiller inlet. Please call Oasis customer service at 800-64-OASIS if you have questions. Failure to install chiller correctly may result in water damage.

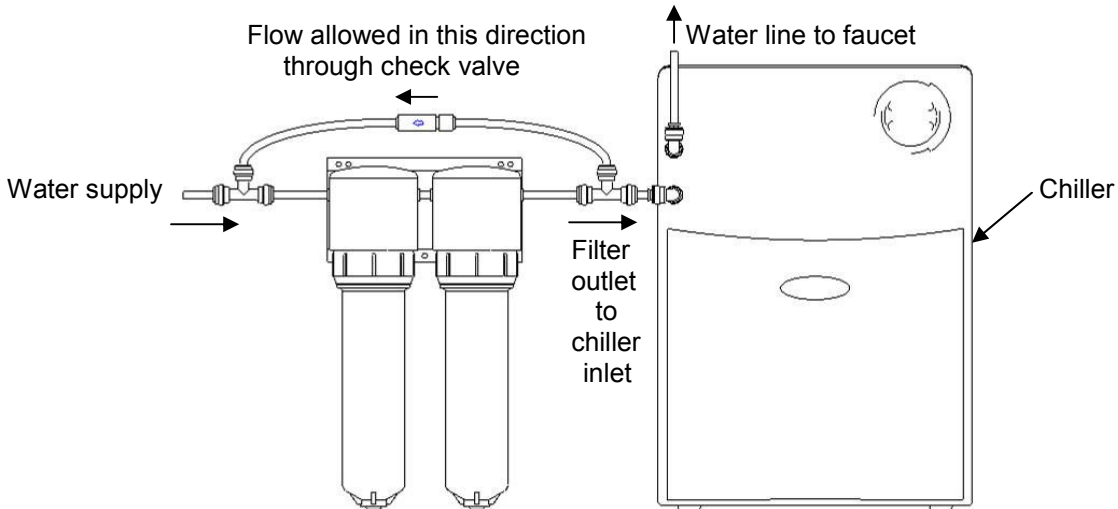


OASIS is a registered trademark of LVD Acquisition, LLC dba Oasis International  
A WBENC – Certified Women's Business Enterprise

© 2012 LVD Acquisition, LLC

030099-458

## **NOTICE:**

Check valve included with unit is intended only to be used as shown below. If no filters are installed, the check valve should not be used. If water supply valve has a back flow preventer in it, an expansion tank allowing a minimum of 5 in<sup>3</sup> (2.8 oz) is needed on chiller inlet. Please call Oasis customer service at 800-64-OASIS if you have questions. Failure to install chiller correctly may result in water damage.

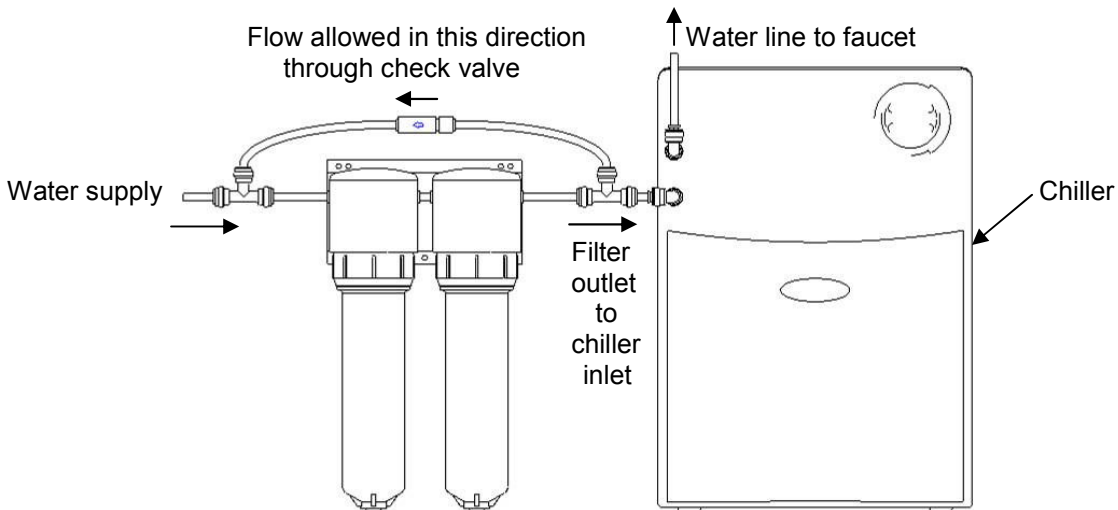

OASIS is a registered trademark of LVD Acquisition, LLC dba Oasis International  
A WBENC – Certified Women's Business Enterprise

© 2012 LVD Acquisition, LLC

030099-458